

To Obtain Service:

If you suspect this product has a manufacturing defect in materials or workmanship:

1. Locate the sales receipt
2. Call place of purchase

Any unauthorized returns will not be accepted.

Warranty Remedy:

THIS SHALL BE YOUR SOLE REMEDY UNDER THIS LIMITED WARRANTY.

If this product is found to have a manufacturing defect in materials or workmanship, we will (at our discretion) do one of the following:

- repair the product
- replace the product
- refund the cost of the product

Colors vary from lot to lot and may not exactly match sample swatch or previous purchases. Discontinued items or color selections will be replaced with the closest equivalent current product.

YOUR RIGHTS UNDER STATE LAW:

This lifetime limited warranty gives you specific legal rights, and you may have other rights, which vary from state to state. Some states do not allow limitations on how long a warranty lasts, so the above limitations may not apply to you.

No agent, representative, dealer, or unauthorized employee has the authority to increase or alter the obligation of this warranty. This lifetime limited warranty supersedes any previous versions.

Roller Shades


INSTALLATION INSTRUCTIONS

Step 1. Check Package Contents

Missing part? Call 800-264-1190

Mounting hardware kit includes the following:

Part	Quantity
a Shade	1
b Slat for Hem Pocket	1
c Brackets	2
d Mounting Screws	4
e Plastic Anchors	4 (For Drywall or Plaster Mounting)

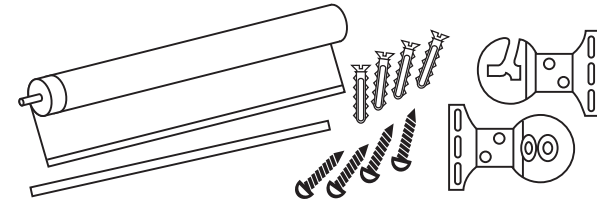


Step 2. Tools required

Screwdriver, tape measure, pencil, drill*, step ladder.


* Use 3/32" drill bit to predrill screw holes

Use 1/4" drill bit for wall anchors..

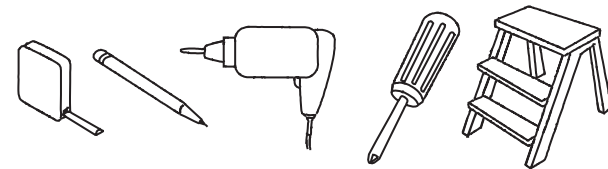

Step 3. Bracket Location and Installation

Your window shade can be installed either inside the window frame or outside the window frame or on the ceiling. When measuring and installing shades, make sure there is a "play" between the roller and the brackets. Shades mounted too tight in the brackets will not function properly. Attach brackets to inside or outside of casing or to the ceiling. The slotted bracket goes on the left side, the bracket with holes on the right.

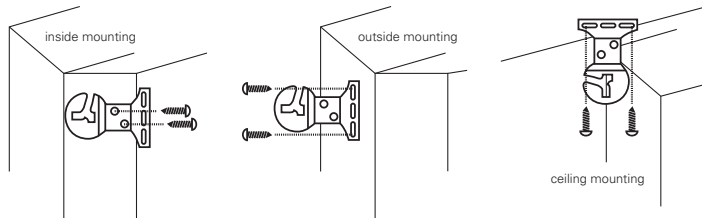

For Outside Mounting / Ceiling Mount:

Hold shade to desired position, making sure it is level, and place pencil marks at base of pin at each end of the roller. Secure brackets. For outside mount, insert the round pin end into the inner hole of the right bracket. For ceiling mount, insert the pin into the outer hole. Then insert the other end of the shade into the slot of the left bracket.

For Inside Mounting:

Allow 1/4" clearance between top of frame and fully rolled-up shade. This will provide enough clearance to lift shade into slotted bracket. Spring loaded tip provides up to 3/8" extra width if needed. Always insert the pin end into the right side bracket first. If the brackets are installed as illustrated (facing out), place the pin into the inner hole of the right bracket. If the brackets are installed facing down (like Ceiling Mount), place the pin into the outer hole of the right bracket. Push into bracket to compress the spring, then place the metal tab on the left side of the shade into the slot of the left bracket.

Step 4. Adjusting for Roller Tension

To tighten, lower the shade about 18" from the top, remove from window brackets. Roll up shade all the way to the top by hand, then replace in brackets.


To loosen, raise the shade to the top and remove from brackets. Unroll about 18" and replace in brackets. Repeat until there is a proper tension. Roller should not be too tight. Remember, when a window shade refuses to roll up, the spring is too loose. When it won't stay down, the roller spring is too tight.

Caution: Overwinding may result in permanent damage.

Step 5. How to Operate

If this shade does not roll straight, correct as follows:

Make sure brackets are mounted level, or the shade will not roll straight. If shade veers toward the right, correct by lowering shade completely and placing a piece of tape (multiple pieces may be necessary) as close to the left edge of the roller as possible. It will act as a shim.

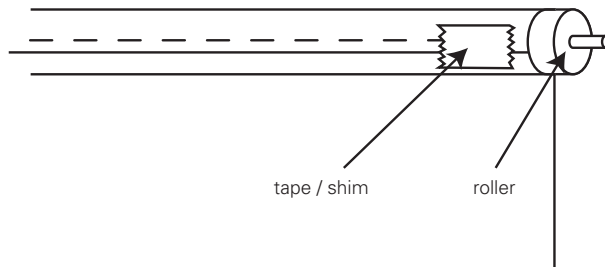

If shade veers toward the left, correct by lowering shade completely and placing a piece of tape (multiple pieces may be necessary) as close to the right edge of the roller as possible. It will act as a shim.

Cleaning your Blinds

Cleans easily with a damp sponge or soft cloth. Allow the shade to hang it's full length for a minimum of 72 hours to minimize wrinkles and creases.

REPLACEMENT PARTS

In the event that replacement parts are ever needed, you may call: 1-800-264-1190

Please be sure to provide the following information, if possible:

- The complete model or catalog number of your product
- A description of the product
- A description of the part needed

LIMITED LIFETIME WARRANTY

The enclosed product is warranted to the original residential retail purchaser as long as the product remains in the original window.

Covered:

Lifetime: Entire product against manufacturing defects (i.e. a flaw in the product design, materials, or workmanship that causes the product to no longer function)

3 years: Cords including internal cords such as those found in cordless blinds. 5 years: All fabric

Not Covered:

Normal Wear and Tear

Any product that fails due to:

- abuse • exposure to salt air • improper installation • accident • extraordinary use
- improper operation • alterations • improper cleaning • misapplication • damage from pests/insects/pets • improper handling • misuse

Natural wood products that have:

- loss of color intensity • yellowing or cracking of plastic parts or foam wood product
- variations in color, grain, or texture • warping of wood slats in high humidity areas

Costs associated with:

- product removal • transportation to and from the retailer • brand label removal
- product remeasure • incidental or consequential damages • product reinstallation
- shipping

In the event there are multiple blinds/shades in the same room, only the defective blind/shade will be replaced.

To Report Shipping Damage:

If damage occurred during shipping, call place of purchase and report within 7 calendar days or else you may be denied credit for your damaged product.